 


## Mini Alarm

Door / Window Alarm  
with Keypad

#### LOCATION OF CONTROLS

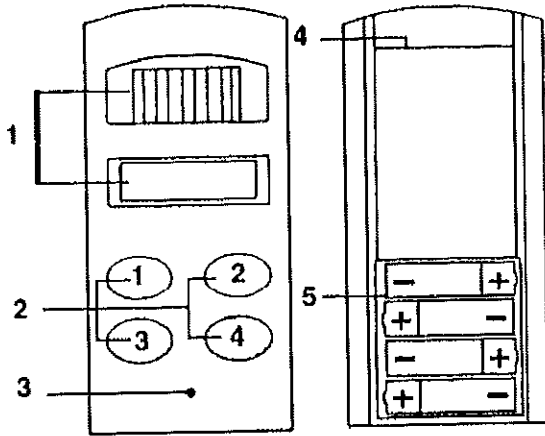


- 1. Siren
- 2. Keypad
- 3. Battery Low LED

- 4. External Siren Socket
- 5. Battery Compartment

#### BATTERY INSTALLATION (SEE FIGURES BELOW)

Access the battery compartment on the rear of the unit by removing the screw on the bottom of the unit and lifting the bottom of the back cover as shown in the figure below. Insert four (4) "AA" size batteries (not included) following the polarity diagram. When the last battery is inserted, the unit will beep **very** loudly to indicate the batteries are installed properly. Replace the battery compartment cover. The Battery Low LED will light when the batteries need replacing.

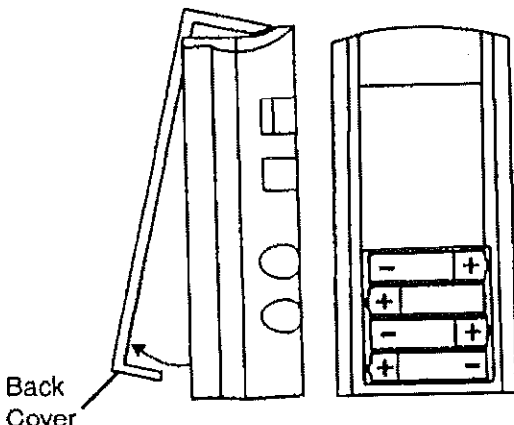

#### BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

- 1. Use only the size and type of batteries specified.
- 2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- 3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
- 4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- 5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture (Follow battery manufacturer's directions)


#### PROGRAMMING THE ALARM

Immediately after inserting the batteries, the desired 4-digit code must be set. To set the code, select your 4-digit access code, and simply press the desired 4 digits on the keypad.

**NOTE:** The alarm must be re-programmed with your personal code every time the batteries are removed and replaced. After removing the batteries, press button number 4 before installing the new batteries.

#### INSTALLATION

Place the unit in the desired location, preferably next to the front or back door or a window. Remove the back cover and secure it to the mounting location using the supplied larger screws (see figure at right). The alarm can now be snapped into place on to the back cover by replacing the screw on the bottom of the unit. Connect the Magnetic Contact 3cm below the top of the alarm unit and flush with its edge using the smaller screws as shown in the figure to the right.

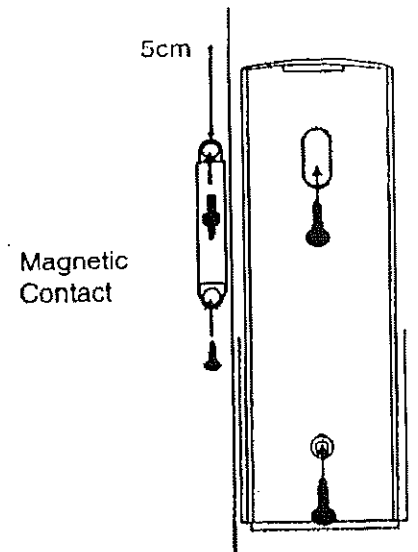

#### OPERATION

**When leaving the protected area,** press keypad number 4 and a confirmation tone will be heard; this will arm the unit. There will be a delay of 30 seconds to enable you to leave the protected area before the alarm sounds. When the contact is broken, the alarm will sound.

**WARNING: THE ALARM SIREN IS VERY LOUD, PLEASE DO NOT LET IT SOUND FOR LONG LENGTHS OF TIME.**

**When returning to the protected area,** simply press your personal alarm code within 10 seconds. The 10 second delay enables you to get to the alarm before it sounds. This will disarm the unit.

**NOTE:** When the fourth digit of your code is entered, it will respond with a tone different from the first 3 digits.