

INTERMATIC® Ceiling Alarm

Model SP310 Instructions

BATTERY INSTALLATION

1. Locate battery holder on back side of the Alarm Unit.
2. Insert batteries into battery holder following the polarity diagram inside of battery holder.

The SP310 Ceiling Alarm requires four (4) "C" alkaline batteries. When the last battery is inserted, the unit will "BEEP" to indicate the batteries are installed properly.

Battery Precautions

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture (Follow battery manufacturer's directions.)

INSTALLATION

1. Choose the desired location.
2. Separate the mounting bracket from Alarm Unit by removing two (2) side screws. (see Diagram A)
3. Attach mounting bracket to desired position by using the screws provided, secure the mounting plate to the wall.
4. Reattach mounting bracket to Alarm Unit by reinstalling the two (2) side screws. (see Diagram B)

ARMING ALARM

When leaving the protected area, point the Remote Control toward the Alarm Unit and press the "Arm" button. There will be a short "BEEP" followed by an approximate 30 second delay before the Alarm Unit is armed. On the Programmable Remote Control body the red LED will light up for a brief period as an indication of proper remote operation and battery power.

DISARMING ALARM

When returning to the protected area, point the Programmable Remote Control toward the Alarm Unit and press the "DISARM" button. There will be a short "BEEP" indication that the Alarm Unit is disarmed. On the Remote Control body the red LED will light up for a brief period as an indication of proper remote operation and battery power.

Note: When entering the protected area there will be a short "BEEP" to indicate that movement has been detected, followed by 4 seconds of silence before the siren will sound.

