 


# INTERMATIC® EXTERNAL ALARM

## INSTRUCTIONS MODEL SP 501

### Siren Speaker Unit

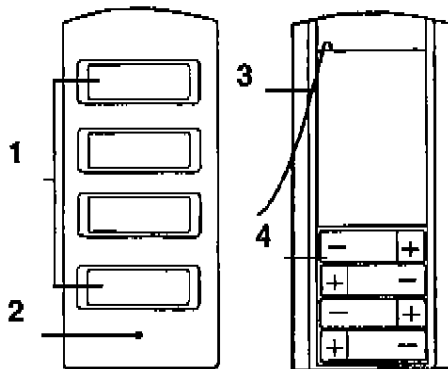

- 1. Speakers
- 2. Battery Low LED
- 3. External Siren Cable
- 4. Battery Compartment

 
 
### INSTALLATION (Siren Speaker Unit)

Place the unit in the desired location away from the Door/Window unit. Remove the back cover and secure it to the wall using the supplied screws (see figure at right). The unit can now be snapped into place on to the back cover and secured by replacing the screw on the bottom of unit. Then connect the External Siren Cable to the External Siren Socket on the Motion Detector. This unit is also free standing.

**NOTE: BE CAREFUL TO ROUTE THE WIRE SO IT CANNOT BE TRIPPED OVER.**

### BATTERY INSTALLATION (SEE FIGURES BELOW)

Access the battery compartment on the rear of the unit by removing the screw on the bottom of the unit and lifting the bottom of the back cover as shown in the figure below. Insert four (4) "AA" size batteries (not included) following the polarity diagram. When the last battery is inserted into the Motion Detector, the unit will beep **very** loudly to indicate the batteries are installed properly. Replace the back cover. The Battery Low LED will light when the batteries need replacing. Because of this unit's unique design, it does not require a battery cover.

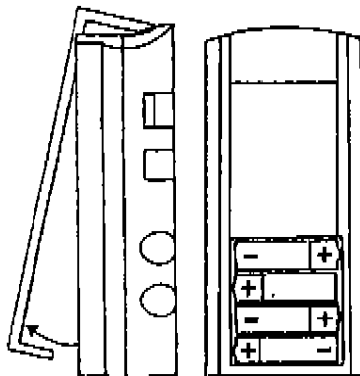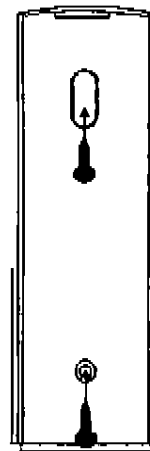

**WARNING: THE ALARM SIREN IS VERY LOUD. PLEASE DO NOT LET IT SOUND FOR LONG LENGTHS OF TIME.**

### BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)