



 
## Remote Siren

### Siren Speaker Unit

## INSTRUCTIONS


### MODEL SP501B

1. Speakers
2. Status LED
3. Battery Compartment
4. Programmable Switch

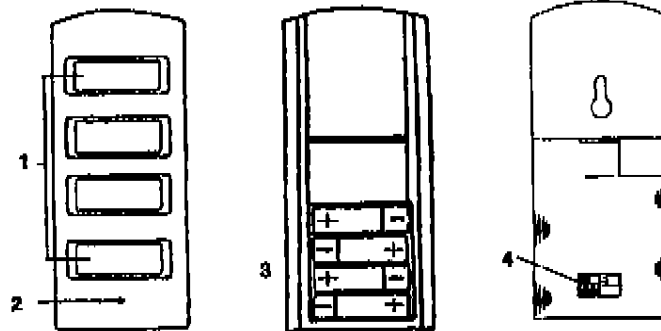

#### BATTERY INSTALLATION (SEE FIGURES BELOW)

 Access the battery compartment on the rear of the unit by removing the back cover. Press on the upper center part of the cover and slide it down. Insert four (4) "AA" batteries (not included) following the polarity diagram. When the last battery is inserted, the Status LED will flash and the LED will flash to indicate the batteries are installed properly. Replace the battery compartment cover. The Siren will chirp every 10-15 seconds when the batteries need replacing. AC accessory SP550B can be used instead of batteries. Output plug must be inserted into AC power plug, located above in left upper corner of battery compartment.

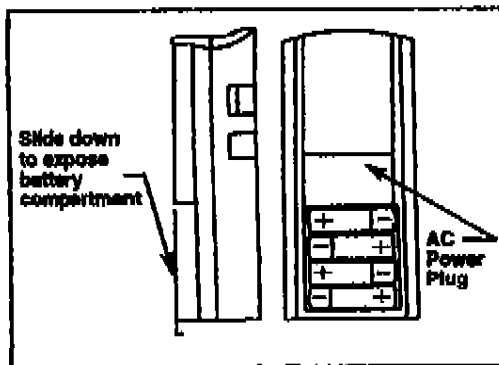

#### BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different type of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Will not function properly if batteries are not maintained. Check performance regularly.

 
**NOTE:** Not intended for use in exposed outdoor applications. Will not operate properly if used in below freezing temperatures (32°F) or damp locations.

#### PROGRAMMING THE SIREN SPEAKER UNIT

1. Remove battery compartment cover, remove batteries.
2. Locate the programmable switch.
3. Set the "CORRECT SWITCH COMBINATION" on programmable switch. All 3 switches of the programmable switch must be set at the same positions as respective switches of the Main Alarm Unit programmable switch.
4. Replace batteries, replace the battery compartment cover.

#### INSTALLATION (Siren Speaker Unit)

The unit is designed to be either free standing or wall mounted. Place the unit in the desired location within 60' from the Alarm Unit. To mount the unit on the wall use the supplied screw (see figure at right).

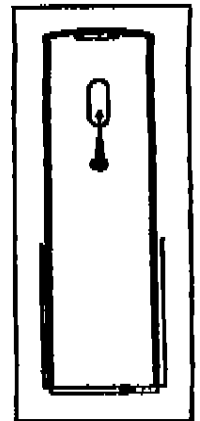

**WARNING:** THE ALARM SIREN IS VERY LOUD; PLEASE DO NOT ALLOW IT TO SOUND FOR LONG LENGTHS OF TIME.

#### OPERATION:

The Remote Siren only sounds when triggered by the main alarm unit, SP210B OR SP230B. Approximately 60 seconds on and 15 seconds off, the cycle will repeat if main alarm stays in alarm mode.