

INTERMATIC®

Programmable Remote Control

Model SP520B

Instructions

The SP520 Programmable Remote Control works with Intermatic Wireless Alarm Model SP210B.

LOCATION OF CONTROLS

1. ARM button
2. Disarm button
3. Status LED
4. Battery Compartment
5. Programmable switch

BATTERY REPLACEMENT (SEE FIGURES BELOW)

1. Access the battery compartment on the front of the unit by removing the back cover. Press on the upper center part of the cover and slide it down. Insert one (1) 12V 23 A battery following the polarity diagram.
2. To maintain the proper battery polarity, duplicate existing battery placement in the battery compartment.
3. Replace battery compartment cover.

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage of the device.
3. Do not mix different type of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Will not function properly if batteries are not maintained. Check performance regularly.

NOTE: Not intended for use in exposed outdoor applications. Will not operate properly if used in below freezing temperatures (32°F) or damp locations.

PROGRAMMING THE REMOTE CONTROL

1. Remove battery compartment cover of the remote control unit SP520B.
2. Locate the Programmable Switch and set 4 switches at the same positions as respective switches of the Main Alarm Unit SP210B.
3. Replace battery compartment cover.

Arming Alarm

When leaving the protected area, point the Remote Control at the Motion Detector unit and press the "ARM/DISARM" alternative action button. The Status LED of the Main Alarm Unit will flash and the Siren will chirp to indicate the unit is armed. There will be a delay of 30 seconds to enable you to leave the protected area before the alarm sounds. On the PROGRAMMABLE REMOTE CONTROL the Status LED will light up for a brief period as an indication of proper remote operation and battery power.

Disarming Alarm

When returning to the protected area, simply point the Remote Control at the Main Alarm Unit and press the "DISARM" button. This will disarm the unit. The 10 seconds delay enables you to get to the alarm before it sounds.


NOTE: When the "DISARM" button is pressed, the Status LED of the PROGRAMMABLE REMOTE CONTROL will light up for a brief period as an indication of proper remote operation and battery power. The Status LED of the Main Alarm Unit will stop to flash and the Siren will stop to chirp to indicate the unit is disarmed.

Range of PROGRAMMABLE REMOTE CONTROL OPERATION

The Programmable Remote Control has a 18 - foot range.

Care and Maintenance

To clean the unit housing use a soft cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolor the unit.

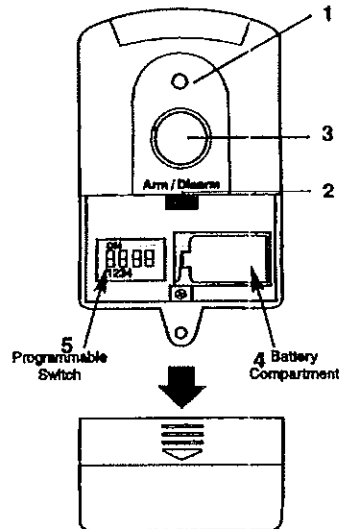

INTERMATIC INCORPORATED
SPRING GROVE, ILLINOIS 60081-9898

ART616B