

INTERMATIC® 7-Day Digital Timer

MODEL DT300 Series

User Instructions

Instrucciones para el usuario / Directives pour l'utilisateur

⚠ WARNING – Risk of fire or electric shock

- For indoor use only in dry locations.
- Do not exceed capacity.
- Do not use timer with devices that could have dangerous consequences due to inaccurate timing, such as sun lamps, heaters, etc.
- Plug directly into receptacle.

NOTICE

- No user serviceable parts.

1—Charge the Battery

Plug timer into wall outlet for a few minutes to charge internal battery.

NOTE: If it would be easier, you can now unplug the timer to set it.

2—Clear the Memory

Press the **RESET** button with a pencil or paper clip to erase any previous settings.

3—Select AM/PM Format

1. Press and hold the **CLOCK** button for about 5 seconds until display shows 24H or 12H, then release.
2. Press the **HOUR** button as many times as necessary to change display to "12H".
3. Press the **CLOCK** button to restore the normal clock display. The letters "AM" should show in upper left corner of the display.

4—Set Time of Day

1. Press and hold the **CLOCK** button.
2. At the same time, press the **HOUR** and **MINUTE** buttons as necessary to advance the display to the correct time.
3. Hold down the **DAYS** button until the display shows the correct day.

5—Set ON/OFF Times

1. Press the **PROGRAM** button once to display the first ON/OFF setting—"1 ON ---:--".
2. Press the **MINUTE** and **HOUR** buttons as necessary to set the ON time you want.
3. Press the **DAYS** button as necessary to choose the day or group of days you want for the time setting.
4. Press the **PROGRAM** button again to display the second ON/OFF setting—"1 OFF ---:--".
5. Repeat the procedure to create the OFF setting.
6. Repeat Steps 1 thru 5 for additional ON/OFF settings.
7. Press the **CLOCK** button to exit from PROGRAM mode.

⚠ ADVERTENCIA – Peligro de incendio o descarga eléctrica

- Sólo para uso en interiores y en lugares secos.
- No se debe exceder la capacidad.
- No use un temporizador para controlar dispositivos que podrían tener consecuencias peligrosas debido a una temporización inexacta, como lámparas solares, calefactores, etc.
- Conecte directamente al tomacorriente.

AVISO

- El producto no contiene piezas que se puedan reparar.

1—Cargue la batería

Enchufe el temporizador en el tomacorriente de pared durante algunos minutos para cargar la batería interna.


NOTA: para hacerlo más fácil, ahora desenchufe el temporizador para configurarlo.

2—Borre la memoria

Presione el botón **RESET** (Reinicio) con un lápiz u objeto puntiagudo para borrar todas las configuraciones anteriores.

3—Seleccione el formato a.m./p.m.

1. Mantenga presionado el botón **CLOCK** (Reloj) durante 5 segundos hasta que la pantalla muestre 24H ó 12H, luego suéltelo.

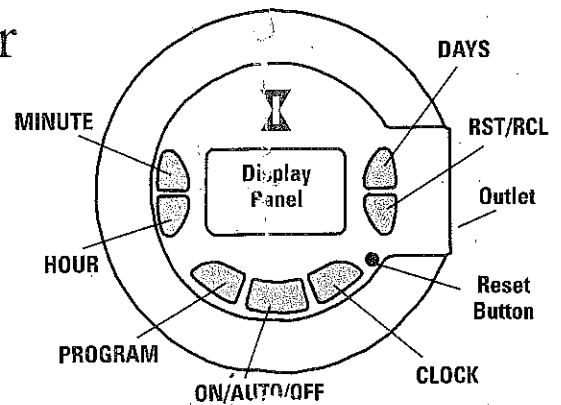

Things to know about ON/OFF times:

- Repeatedly pressing the **PROGRAM** button cycles through the possible 20 ON/OFF pairs: 2 ON, 2 OFF, 3 ON, 3 OFF, etc.
- The display panel automatically returns to time of day if you don't press any buttons for 15 seconds.
- If you are interrupted before completing a setting, simply press the **PROGRAM** button until you reach the setting where you left off.

5—Review ON/OFF Settings

It is important to review all 20 settings, even if you only used a few, to make sure there are no extra, unintended settings.

1. Press the **PROGRAM** button (hold down to scroll) until the display cycles through all 20 ON/OFF pairs.
2. Stop on any setting you want to remove or change.

To Revise a Setting


1. Press the **PROGRAM** button (hold down to scroll) until the display shows the setting you want to revise.
2. Press the **HOUR**, **MINUTE** and **WEEK** buttons as necessary to revise the displayed ON or OFF time and day(s).

To Remove or Restore a Setting

1. Press the **PROGRAM** button (hold down to scroll) until the display shows the setting you want to remove or restore.
2. Press the **RST/RCL** button.
 - If removing, the display will replace the setting with dashes.
 - If restoring, the display will show the previous setting.

To Operate the Timer

1. After setting the timer, plug it in and connect the device to be controlled.
2. Press the **ON/AUTO/OFF** button as necessary to display:
 - ON**—The timer remains ON and ignores your settings.
 - OFF**—The timer remains OFF and ignores your settings.
 - AUTO**—The timer follows your settings.

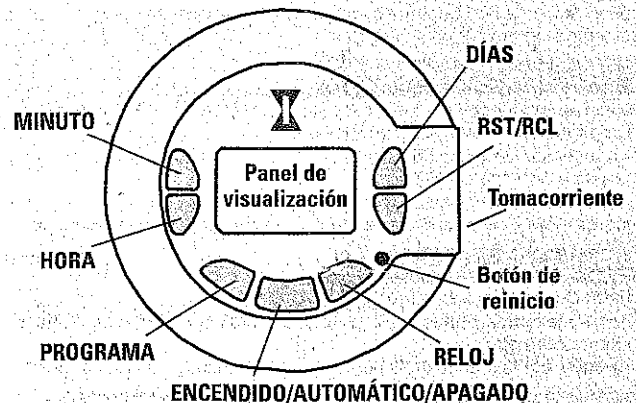

2. Presione el botón **HOUR** (Hora) las veces que sea necesario para cambiar la pantalla a "12H".
3. Presione el botón **CLOCK** (Reloj) para restablecer la pantalla del reloj normal. Las letras "AM" deben aparecer en el extremo superior izquierdo de la pantalla.

4—Ajuste de la hora del día

1. Mantenga presionado el botón **CLOCK** (Reloj).
2. Al mismo tiempo, presione los botones **HOUR** (Hora) y **MINUTE** (Minuto) según sea necesario para avanzar la pantalla hasta la hora correcta.
3. Mantenga presionado el botón **DAYS** (Días) hasta que la pantalla muestre el día correcto.