


INTERMATIC® RAIN TIGHT OUTDOOR TIMER

PROGRAM REPEATS EVERY 24 HOURS
TO SET TIMER: (SEE ILLUSTRATION)

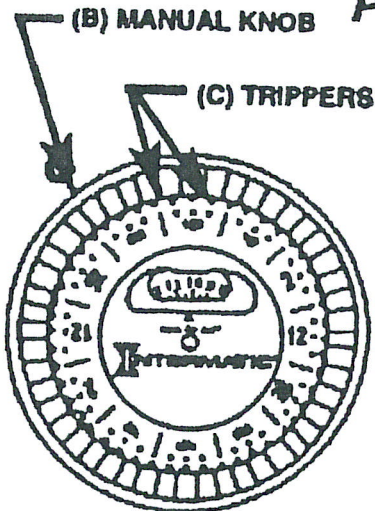

1. PULL UP one tripper (A) for each half hour of ON time, between desired marks on the 24 hr. dial. For example if you want the timer ON from 6 PM to 10 PM, all 9 trippers between 6-10 PM must be pulled up.
2. Turn dial **CLOCKWISE** → one or more complete revolutions until the exact time-of-day is to the time-of-day arrow.
3. Turn lamp or appliance ON.
4. Plug extension cord, lamp or appliance into timers receptacle and plug timer cord into

wall outlet, suitable for "wet locations" if outdoors.

FOR EARLY ON OR OFF OPERATION,

Turn manual knob (B) counter clockwise ← to desired ON or OFF position, Timer will follow next scheduled automatic operation.

IN CASE OF POWER FAILURE, RESET TIMER, (SEE STEP 2)

WARNING: To avoid shock hazard, timer must be installed **VERTICALLY** and at least 3 ft. ABOVE ground level. **WATTAGE OF LAMPS OR APPLIANCES BEING CONTROLLED SHOULD NOT EXCEED CAPACITY OF TIMER. WHEN USED WITH EXTENSION CORD OR DEVICES DO NOT EXCEED THEIR RATING OR 15 AMPS.**

MODEL: HB81R70

15 AMP (1800 WATT) RESISTIVE; 15 AMP

(1800 WATT) TUNGSTEN; 15 FLA (90 LRA) MOTOR-120 VOLT 60 HZ.

INTERMATIC INCORPORATED

154SB19613

