



HB1113R OUTDOOR TIMER INSTRUCTIONS

Thank you for purchasing the HB1113R Outdoor Timer with Stake and Receptacles. Please read the instructions below, before using this product:

Features

- Weather resistant cover with latch to secure up to three extension cords
- Three grounded outlets controlled by an easy-to-set timer
- Timer features two ON and OFF settings per day
- Unit can be wall mounted, or used with easy-to-install ground stake
- Grounded plug-in interface for a grounded extension cord (sold separately).
- Manual override switch

Timer Instructions (See Fig. 1)

1. Insert ON (Green) trippers and OFF (Red) trippers into dial at desired ON and OFF times.
2. Turn dial clockwise (→) one or more complete revolutions until the arrow head is aligned with the current time of day. Please note that AM times are in the white section of the dial, and PM times are in the black section of the dial.
3. Turn lamp or device ON.
4. Plug extension cord, lamp or appliance into timer receptacles. Plug female end of extension cord (sold separately) into timer and the male end into a ground fault protected outdoor receptacle. The receptacle must have a National Electric Code approved "while in use" receptacle cover (see note below)

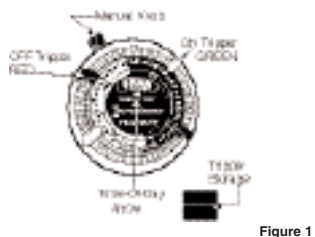 


Figure 1

NOTE:

Wall Receptacle Cover: In order to meet the 2002 National Electric Code you should use a receptacle cover that protects your outdoor receptacle when your timer is plugged in. Recommended for use are Intermatic Model WP1100C or for heavier cords sets, Models WP1110C or WP1150C.

Manual Override: Timer may be turned ON or OFF manually, by turning the override knob counterclockwise (←). The timer will resume the next scheduled ON and OFF cycle automatically. See Figure 1.

NOTE: Whatever timer setting(s) are chosen, the setting(s) will apply to all 3 receptacles.

Wall Mounting the Timer: If timer is mounted on a wall, it must be at least 3 feet above the ground. See Figure 2 for location of mounting screws.

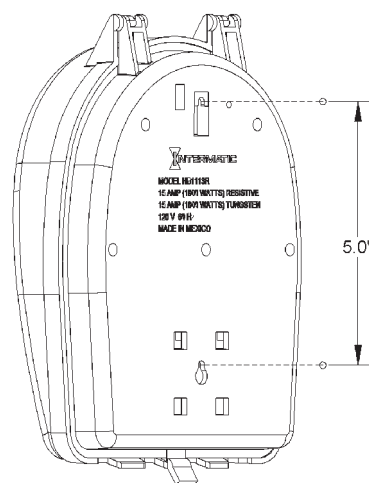 


Figure 2

FRONT

Stake Mounting: Place tabs on stake over the retention holes on the back of the timer. Push up on stake until tabs lock in place. See Figure 3. The stake should be inserted in the ground up to the barrier on the stake. See Figure 4. DO NOT DRIVE THE STAKE INTO THE GROUND



Figure 3

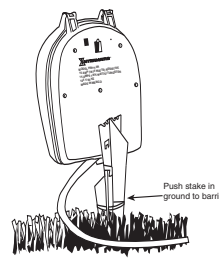 


Figure 4

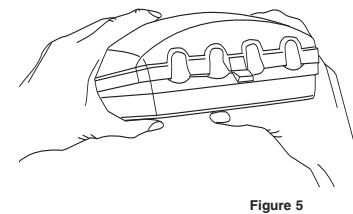 


Figure 5

Latching the cover: Hold cover and rear of unit with **both** hands and press firmly until latch snaps into place. (Fig. 5)

Electrical Ratings

- 15 Amp Resistive (heater), 1800 Watts
- 15 Amp Tungsten (Incandescent), 1800 Watts
- 120 Volts AC,

For Your Safety

Do not modify, splice or repair this unit.
Do not exceed electrical load ratings.
Do not submerge in water

CAUTION:

PLUG EXTENSION CORD INTO A GROUND FAULT PROTECTED RECEPTACLE ONLY.

CAUTION: SUITABLE FOR OUTDOOR USE IN WET LOCATIONS.

3/14 gauge or 3/12 gauge extension cords required.

Maximum length of extension cord cannot exceed 50 feet.

Acceptable outdoor extension cords include SJOW, SJOOW, SJTW, SJTOW, SJTOOW, SOW, SOOW, STW, STOW, AND STOOW.

Fully insert plugs into timer.

For adult use only.

LIMITED 1 YEAR WARRANTY

If within one (1) year from the date of purchase, this product fails due to a defect in material or workmanship, Intermatic Incorporated will repair or replace it, at its sole option, free of charge. This warranty is extended to the original household purchaser only and is not transferable. This warranty does not apply to: (a) damage to units caused by accident, dropping or abuse in handling, acts of God or any negligent use; (b) units which have been subject to unauthorized repair, opened, taken apart or otherwise modified; (c) units not used in accordance with instructions; (d) damages exceeding the cost of the product; (e) sealed lamps and/or lamp bulbs, LED's and batteries; (f) the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear; (g) transit damage, initial installation costs, removal costs, or reinstallation costs.

INTERMATIC INCORPORATED WILL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY MODIFIED TO EXIST ONLY AS CONTAINED IN THIS LIMITED WARRANTY, AND SHALL BE OF THE SAME DURATION AS THE WARRANTY PERIOD STATED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty service is available by either (a) returning the product to the dealer from whom the unit was purchased, or (b) mailing the product, along with proof of purchase, postage prepaid to the authorized service center listed below. This warranty is made by: Intermatic Incorporated/After Sales Service/7777 Winn Rd., Spring Grove, Illinois 60081-9698/815-675-7000 <http://www.intermatic.com> Please be sure to wrap the product securely to avoid shipping damage.

INTERMATIC INCORPORATED
SPRING GROVE, ILLINOIS 60081-9698

158HB11726

BACK

158HB11726

NOTES:

ALL PRINTING TO BE AS PER INTERMATIC APPROVED ARTWORK.

SEE B/M FOR ALL PART NUMBERS & QUANTITIES

ITEM	PT. NO.	DESC.	QUAN.
INTERMATIC INCORPORATED			
		DR.: SRB 7/30/2004	
		CHKD.: TS 7/30/2004	
		SCALE	
		APPROVED	
2	REVISED ART	SRB 8/5/2004	
1	RELEASED TO ELEC. DATA		
LET.	REVISION	SIGN.	MODEL
		SUPERSEDES:	
		DIM TOL	FRACTIONS ± .010 . DECIMALS AS SPECIFIED - ANGLES ± 1/2°
		ALL DIMENSIONS MUST BE MET BEFORE PLATING.	