



SOUND ACTIVATED SECURITY SOCKET SX740

Suggested Applications

- **HOME SECURITY.**

Indoors or out the SX740 is an effective sound-activated burglar deterrent. With the SX740 placed in your light fixtures, your home is protected against unwanted intrusion.

- **SAFETY.**

Around the outdoor perimeters of your home or inside wherever you use a lamp, illuminates your way as it hears your approach and turns hazardous walkways into safe ones.

- **CONVENIENCE.**

Because the SX740 socket is sound-activated it eliminates the need for a light switch. You'll never have to grope in the dark for a light switch again.


- **ENERGY SAVINGS.**

The Sound-Activated Security Socket is equipped with a daytime sensor which reduces sensitivity during daylight hours. At nightfall, the SX740 is ready to turn on your lights at the sound of your footsteps, and turns your lights off when sound is no longer present. Shut-off saves you money.

Installation (NO WIRING REQUIRED)

- **Outdoors:** The SX740 simply screws into a floodlamp socket. Light bulb or floodlamp (up to 150 watts) then fits into the SX740 socket, providing sound-activated security to your driveway, yard, or entryway. **Note: If light fixture is switch-controlled, switch must be left in "ON" position for SX740 to operate.**

- **Indoors:** The SX740 may be used in any fixture or lamp. (Remember, if your light is switch-controlled, the switch must be left in "ON" position.) For lamps with removable shades we have provided an adapter to hold the lamp-shade wire support (harp). To use, unscrew the ridged SX740 collar, slip on the harp adapter and replace collar. With the SX740 in place your lamp is now sound-activated. **Your SX740 should not be operated without screw or collar in place.**

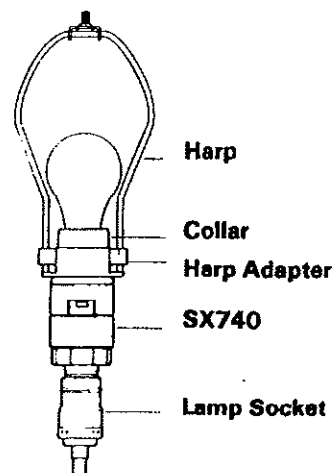


NOTE: The SX740 should be used only for electric lights of 150W or less. Improper use will void Warranty.

In subfreezing temperatures the SX740 sound activating circuit may cease to function. This is not a defect. For continuing security the lightbulb in the socket

will remain on until the temperature rises and the circuit heats up to minimum operating levels.

Settings

The SX740 should be set to the requirements of its location. It is provided with a Sensitivity Adjustment Control as well as an LED Setting Guide. When setting sensitivity, simulate the sound level to which you want the SX740 to respond and turn the Sensitivity Adjustment Control until the LED Setting Guide blinks brightly. To make setting easier in the daytime, Light Sensor should be covered. (Turn clockwise to **increase** sensitivity, counter-clockwise to **decrease** it. A setting tool is enclosed).

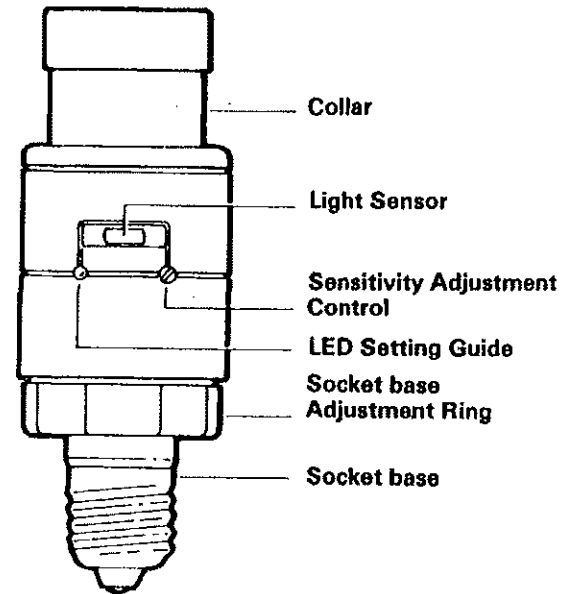

Before using, set sensitivity to "Low". Plug in lamp and unit. Switch lamp on and allow up to three (3) minutes of quiet for the unit to stabilize and lamp to go off. Then set sensitivity to desired level.

Once you have set your sensitivity level, no further adjustments are required. The built-in Automatic Timing Circuit (ATC) conveniently regulates shut-off time automatically.

AUTOMATIC TIMING CIRCUIT (ATC)

The SX740 features a preset Automatic Timing Circuit (ATC) which eliminates the need for timing adjustments. In the presence of sound the SX740 will turn the light ON for several minutes. The shut-off time depends upon the type of sound and its duration. If no further sound is sensed the unit will turn the light OFF at the end of its timing period.

A **Socket base Adjustment Ring** allows the extension of the base of the SX740 socket to fit your light fixture. Turn ring to release base, tighten it to secure it.

FULL ONE YEAR WARRANTY

If within one (1) year from the date of purchase, this product fails due to a defect in material or workmanship, Intermatic Incorporated will repair or replace it free of charge.

The warranty does not apply to: (a) damage caused by accident, abuse, mishandling, dropping; (b) units which have been subject to unauthorized repair, opened, taken apart; (c) units not used in accordance with directions; (d) **damages exceeding the cost of the product**. Some states do not allow a limitation of damages, so the foregoing limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This warranty service is available by either (a) returning the product to the dealer from whom the unit was purchased, or (b) mailing postage prepaid to the nearest authorized service station. Please be sure to wrap the product securely when mailing to avoid shipping damage. This warranty is made by: Intermatic Incorporated, Spring Grove, Illinois 60081-9698.

INTERMATIC INCORPORATED
SPRING GROVE, ILLINOIS 60081-9698