

INTERMATIC[®]

MODEL TN800CL

User Instructions

⚠ WARNING – Risk of fire or electric shock


- For indoor use only in dry locations.
- Do not exceed capacity.
- Do not use timer with devices that could have dangerous consequences due to inaccurate timing, such as sun lamps, heaters, etc.
- Plug directly into receptacle.

NOTICE

- No user serviceable parts.

To Set Time of Day

Turn dial clockwise until arrow points to correct time of day.

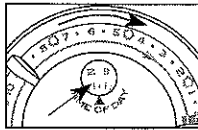

WHITE window indicates AM.





DARK window indicates PM.



For Manual Override


To override current timer setting, turn Manual Override Indicator Wheel on side of timer one click.

- **GRAY** = outlets switched OFF
- **WHITE** = outlets switched ON

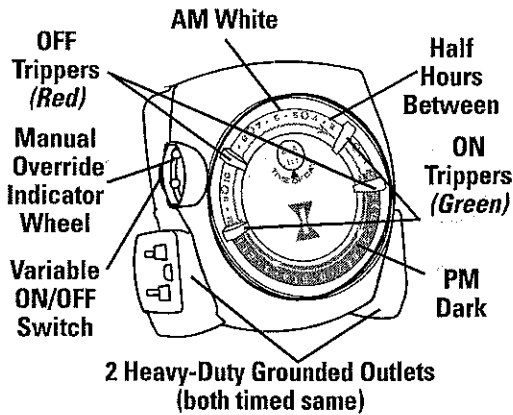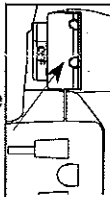

To Set Program


1. Plug lamp into timer.
2. Make sure lamp is switched ON.
3. For each **GREEN (ON)** and **RED (OFF)** trippers, push tripper out from center of dial.
4. Slide tripper around dial to desired time.
5. Push tripper in toward center of dial to engage. Leave unused trippers in OUT position to store.

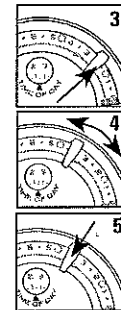

Security Feature

For "lived-in" look, set Variable ON/OFF switch on side of timer:

- **ON** = varies ON/OFF times ± 15 minutes
- **OFF** = standard operation

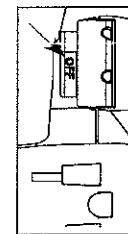


⚠ ADVERTENCIA: Peligro de incendio o descarga eléctrica

- Solo para uso en interiores y en lugares secos.
- No se debe exceder la capacidad.
- No use un temporizador para controlar dispositivos que podrían tener consecuencias peligrosas debido a una temporización inexacta, como lámparas solares, calefactores, etc.
- Conecte directamente al tomacorriente.


AVISO

- El producto no contiene piezas que se puedan reparar.

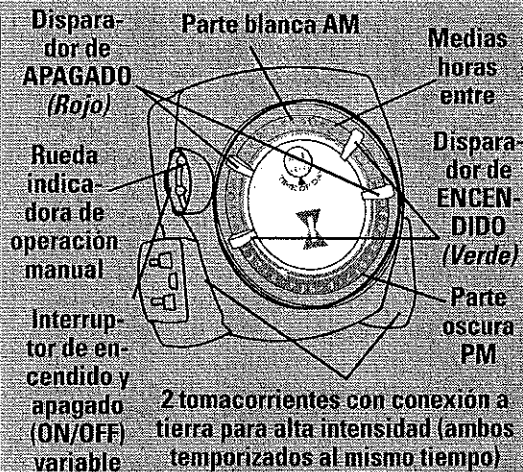


Para ajustar la hora del día

Gire la esfera hacia la derecha hasta que la flecha apunte a la hora correcta del día.

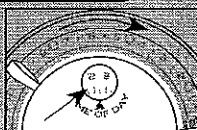

La ventana BLANCA indica AM.

La ventana OSCURA indica PM.

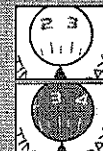

LIMITED LIFETIME
TN 800