



INTERMATIC TIME-ALL


VARIABLE ON/OFF SETTINGS
PROGRAM REPEATS EVERY 24 HOURS

TO SET TIMER: (SEE ILLUSTRATION)

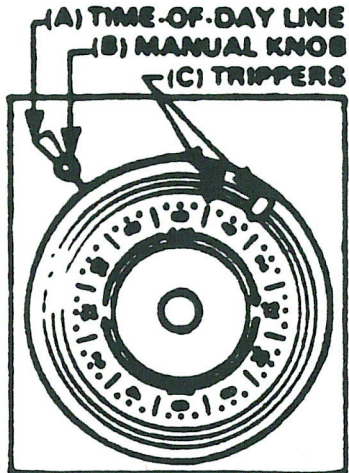

1. Insert ON (ORANGE) and OFF (BROWN) trippers (C) into dial at desired ON and OFF times.
2. Turn dial **CLOCKWISE**  one or more complete revolutions until the correct time-of-day is adjacent to the time-of-day line (A).
3. Turn lamp or appliance ON and plug into timer.
4. Plug timer into electrical outlet.

FOR EARLY ON OR OFF OPERATION,

Turn manual knob (B) counter clockwise  to desired ON or OFF position. Timer will follow next scheduled automatic operation.

IN CASE OF POWER FAILURE, RESET TIMER.(SEE STEP 2)

CAUTION: WATTAGE OF LAMPS OR APPLIANCES BEING CONTROLLED SHOULD NOT EXCEED CAPACITY OF TIMER.

MODEL: SB711

15 AMP.-1875 WATT "R"; 1250 WATT "T"
"TV-5"; 1/3 HP.-125 VOLT 60 HZ.

INTERMATIC INCORPORATED
SPRING GROVE ILLINOIS 60081-6668
11487768



LISTED
900L