


INTERMATIC TIME-ALL®

**PROGRAM REPEATS EVERY 24 HOURS
TO SET TIMER: (SEE ILLUSTRATION)**

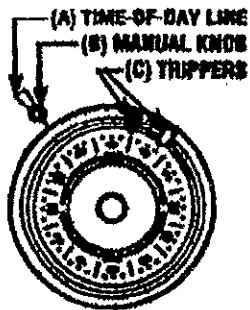

1. Insert ON (RED) and OFF (BLACK) trippers(C) into dial at desired ON and OFF times.
2. Turn dial CLOCKWISE → one or more complete revolutions until the correct time-of-day is adjacent to the time-of-day line (A).
3. Turn lamp or appliance ON and plug into timer.
4. Plug timer into electrical outlet.

FOR EARLY ON OR OFF OPERATION,
Turn manual knob (B) counter clockwise ← to desired ON or OFF position. Timer will follow next scheduled automatic operation.

IN CASE OF POWER FAILURE, RESET TIMER, (SEE STEP 2)

**CAUTION: WATTAGE OF LAMPS OR APPLIANCES BEING CONTROLLED
SHOULD NOT EXCEED CAPACITY OF TIMER.
REPLACE CORD SET WITH HPN TYPE ONLY.**

MODEL: TB111

15 AMP.-1875 WATT "T"; 1250 WATT "T"

"TV-5": 1/3 HP.-125 VOLT 60 HZ.

INTERMATIC INCORPORATED

SPRING BRIDGE, ILLINOIS 60067-8888

16-0000-100-02

 LR3730

 LISTED T
885L