


MANUAL KNOB
ON TRIPPER GREEN

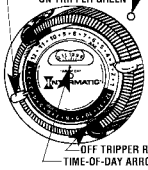

OFF TRIPPER RED
TIME-OF-DAY ARROW

24 HR. OUTDOOR TIMER

TO SET TIMER:

1. Insert **ON (GREEN)** and **OFF (RED)** trippers into dial at desired **ON** and **OFF** times.
2. Turn dial **CLOCKWISE** → one or more complete revolutions until the arrowhead is aligned with time-of-day (AM or PM) in window.
3. Turn lamp or appliance **ON**.
4. Plug extension cord, lamp or appliance into timers receptacle and plug timer cord into wall outlet, suitable for "wet locations" if outdoors.

FOR EARLY ON OR OFF OPERATION, Turn manual knob counter clockwise ← to desired **ON** or **OFF** position, Timer will follow next scheduled automatic operation.

IN CASE OF POWER FAILURE, RESET TIMER, (SEE STEP 2)

WARNING: To avoid shock hazard, timer must be installed VERTICALLY and at least 3 ft. ABOVE ground level. WATTAGE OF LAMPS OR APPLIANCES BEING CONTROLLED SHOULD NOT EXCEED CAPACITY OF TIMER. WHEN USED WITH EXTENSION CORD OR DEVICES DO NOT EXCEED THEIR RATING OR 10 AMPS.

MODEL: HB35R 10 AMP (1200 WATT) RESISTIVE; 10 AMP (1200 WATT) TUNGSTEN; 10 FLA (60 LRA) MOTOR-120 VOLT 60 HZ.

INTERMATIC INCORPORATED  LR3730  LISTED 885L

154HB22930

2.375"