




# HID Wall Pack - WLC Series

## INSTALLATION INSTRUCTIONS

Models: WLFC150HPS,  
WLFC150MH, & WLFC175MH

**FOR OUTDOOR USE ONLY  
NOT FOR USE IN HAZARDOUS  
ATMOSPHERES**

**IMPORTANT: Read instruction sheet  
carefully before installing fixture. Retain  
instructions for future reference.**

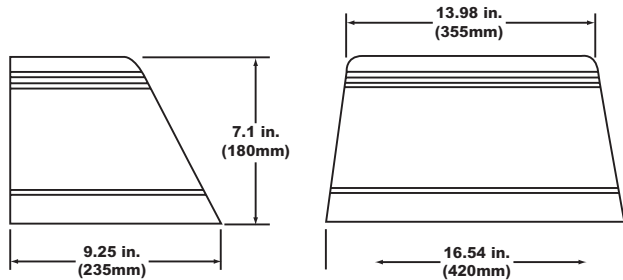

### ELECTRICAL REQUIREMENTS

A qualified electrician should complete all required wiring. This fixture will accept 120, 208, 240 or 277 Volts AC and must be properly grounded for safety. A mounting suitable for outdoor use and rated for wet locations is required. Follow all applicable electrical codes and regulations.

#### **WARNING**

*Please see below for list of warnings.*

##### **WARNING** Electric shock hazard

Disconnect power at circuit breaker or fuse box before installing or servicing light.

##### **WARNING** Fire hazard

CONNECT TO SUPPLY IN EXTERNAL JUNCTION BOX ONLY.

Lamp and housing become very hot during use. Ensure free air circulation around unit to dissipate heat. Avoid enclosed locations and locations where flammable debris (leaves, cut grass, etc.) might collect. Avoid locations where humans or animals might accidentally touch fixture.

##### **WARNING** Explosion hazard

Never operate light without securing the lens door. When light is operating, the gas in the lamp inner arc tube is at high pressure. Never operate light if the fixture lens or outer glass envelope of the lamp is broken or missing.

##### **WARNING** Explosion hazard

Wear safety glasses and gloves when handling lamp. High pressure Sodium outer envelope is under vacuum and could implode. Metal Halide outer envelope is pressurized and could explode if broken.

##### **WARNING** UV hazard (Metal Halide Lamps Only)

The type of lamp used in this fixture can cause serious skin burn and eye inflammation from short wave ultra violet radiation if outer envelope of the lamp is broken or punctured, and the arc tube continues to operate. Do not use where people will remain for more than a few minutes. Certain types of lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available.

#### Lamp Types:

High Pressure Sodium 150 Watt  
Metal Halide 150 Watt & 175 Watt

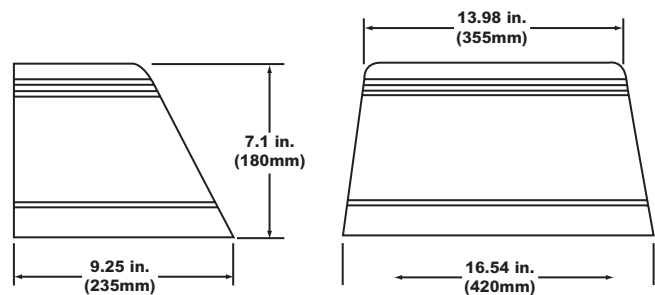


Figure 1

#### MOUNTING & WIRING

1. Loosen (2) screws, open lens cover. Loosen two hinge retaining clips and remove fixture lens cover. Set lens cover aside to prevent damage while installing.
2. Loosen (4) screws and remove reflector.
3. Identify supply voltage.

## MOUNTING & WIRING (continued)

4. Select appropriate fixture wire to match incoming voltage. All fixtures are shipped with 277V wire ready for connection. If supply voltage is lower, cap wire marked 277V with appropriate twist on wire connector and strip fixture wire marked with matching voltage. (See Figure 2 or Figure 3)
5. Feed the matching voltage fixture wire, fixture wire marked "COM", and fixture grounding wire through ground and out of the fixture.
6. Confirm all unused voltage fixture wires are appropriately capped within fixture body. Mount fixture mounting plate to approved junction box (use level on plate to adjust plate position).
7. Using provided twist on or other approved connectors, connect the fixture wires to the supply wires.
  - a. Connect the selected voltage fixture wire to the Black (hot) supply wire.
  - b. Connect the White fixture wire marked "COM" to the White (neutral) supply wire.
  - c. Connect the Green (fixture ground) wire to the supply grounding wire.
8. Secure fixture to mounting plate using two set screws at bottom rear of fixture. (Fixture should be mounted horizontally).
9. Install the reflector and secure with (4) screws.
10. Screw lamp into lampholder until finger-tight. Reposition lens cover and tighten hinge retaining clips.
11. Install, close, and secure lens cover with (2) screws making sure that the gasket is properly seated. To weatherproof fixture, seal all holes in housing

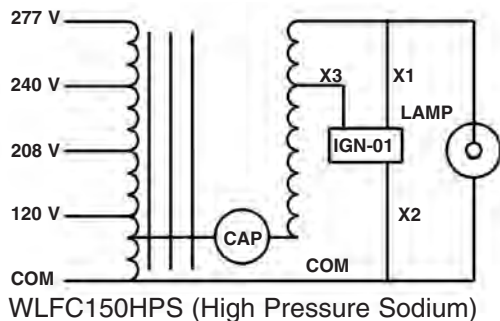


Figure 2

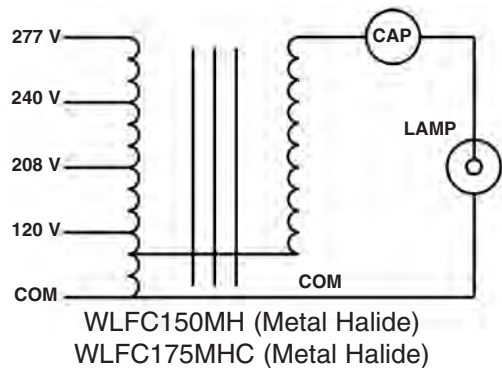


Figure 3

(mounting conduit, plugs, photocontrols, etc.) with silicone sealant.

12. To operate, restore power to the circuit and switch light on.

### **⚠ CAUTION (Metal Halide Lamps Only)**

Do not use lamp beyond manufactures rated life to reduce chance of lamp rupture. Turn lamp off at least once for 15 minutes per week to reduce chance of lamp rupture.

## LAMP REPLACEMENT

### **⚠ CAUTION**

Use lamp of correct type and wattage as specified on fixture.

1. Turn off power at circuit breaker or fuse box. Allow fixture and lamp to cool.
2. Loosen (2) screws, open, and remove fixture lens cover. Remove old lamp and replace with new lamp of correct type and wattage. Screw lamp into socket in lampholder until finger-tight.
3. Install, close, and secure lens cover with (2) screws making sure that gasket is properly seated, free of debris, and compressed to seal out moisture.
4. Turn power back on.
5. Properly dispose of lamp per manufacturer's recommendations.

### LIMITED 1 YEAR WARRANTY

If within one (1) year from the date of purchase, this product fails due to a defect in material or workmanship, Intermatic Incorporated will repair or replace it, at its sole option, free of charge. This warranty is extended to the original purchaser only and is not transferable. This warranty does not apply to: (a) damage to units caused by accident, dropping or abuse in handling, acts of God or any negligent use; (b) units which have been subject to unauthorized repair, opened, taken apart or otherwise modified; (c) units not used in accordance with instructions; (d) damages exceeding the cost of the product; (e) sealed lamps and/or lamp bulbs; (f) the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear; (g) transit damage, initial installation costs, removal costs, or reinstallation costs. INTERMATIC INCORPORATED WILL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY MODIFIED TO EXIST ONLY AS CONTAINED IN THIS LIMITED WARRANTY, AND SHALL BE OF THE SAME DURATION AS THE WARRANTY PERIOD STATED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty service is available by either (a) returning the product to the dealer from whom the unit was purchased, or (b) mailing the product, along with proof of purchase, postage prepaid to the authorized service center listed below. This warranty is made by: Intermatic Incorporated/After Sales Service/7777 Winn Rd., Spring Grove, Illinois 60081-9698/815-675-7000 <http://www.intermatic.com> Please be sure to wrap the product securely to avoid shipping damage.

THESE INSTRUCTIONS DO NOT COVER ALL VARIATIONS IN EQUIPMENT, NOR DO THEY PROVIDE FOR ALL SITUATIONS RELATED TO FIXTURE INSTALLATION, OPERATION OR MAINTENANCE. FOR FURTHER INFORMATION CONTACT YOUR DISTRIBUTOR OR INTERMATIC INCORPORATED - SPRING GROVE, ILLINOIS 60081 (815) 675-7000 [www.intermatic.com](http://www.intermatic.com)