 


INTERMATIC®


HEATWAVE®

**POWERFUL INSTANT ROOM HEATER
WITH FORCED AIR CIRCULATION
120 VOLTS AC, 1500 WATTS (12.5 AMPS.)**

**INSTRUCTIONS FOR
MODELS JH200, JH400, JH600**

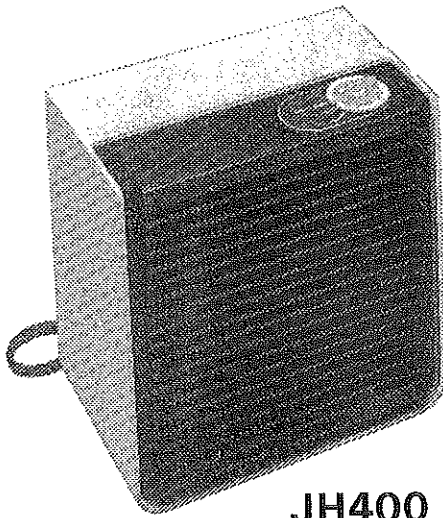

JH400

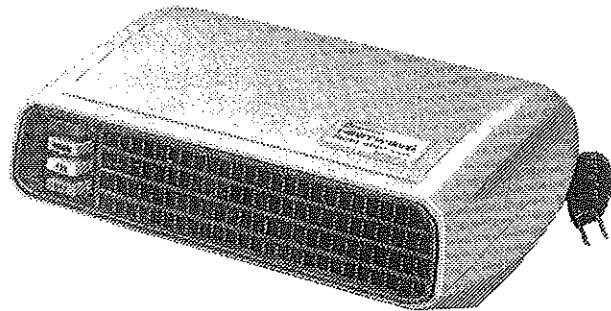

JH600



- Up to 5120 BTUs of instant heat.
- Room size heating. Fan only for cooling.
- Safe: no red hot coils.
- No dangerous flammable fuels. No fumes or odors.
- Shock resistant plastic housing.
- Automatic safety shut-off switch.

READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR NEW INTERMATIC HEATWAVE.

The Intermatic Heatwave has been manufactured to the most exacting standards. However, as with all electric appliances, basic precautions should always be followed to reduce the risk of accidental fire, electric shock or injury to persons.

IMPORTANT INSTRUCTIONS

Please observe the following precautions when using the Intermatic Heatwave heater.


1. Operating on AC current only (120 volts 60 Hz.)
2. Plug directly into outlet. Use of extension cord is not recommended. However, if an extension cord is used, the cord should be rated for electric heaters, 16 AWG gauge minimum, rated no less than 15 Amps, 1650 watts, and not longer than 25 feet. Smaller size lamp extension cord must not be used.
3. Keep combustible materials, such as drapes, and other furnishings, away from heater. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. Use handles if provided when moving.
4. This heater is not intended for use in humid atmospheres or in wet or moist locations such as bathrooms or laundry areas. Never locate heater where it may accidentally fall into a bathtub, sink, or other water container.
5. Extreme caution is necessary when heater is used near children or invalids and whenever heater is left operating and unattended.
6. Always unplug heater when not in use.
7. Do not cover cord with throw rugs, runners or the like. Do not run cord under carpeting. Arrange cord away from traffic and where it will not be tripped over. Do not wrap cord around heater storage brackets when in operation on models JH200 and JH400.
8. To prevent possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
9. Do not use outdoors.
10. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
11. To disconnect heater, turn controls to OFF, then remove plug from outlet.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.
13. A heater has hot and arcing or sparking parts inside. Do not use heater where gasoline, paint, or flammable liquids are used or stored.
14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
15. Although heater cord and plug will normally be warm when operating, if plug becomes unduly hot during use, remove and allow to cool. Then try it in another outlet. If plug remains cool, first outlet may be defective.
16. **DO NOT LEAVE HEATER UNATTENDED WHEN OPERATING FOR LONG PERIODS OF TIME.**

SAVE THESE INSTRUCTIONS.

HOW TO USE


1. Make sure control is in OFF position before plugging in cord.
2. Turn control knob setting (or depress appropriate push button on Model JH600) to either WARM (750 watts) or HOT (1500 watts) or FAN only operation for summer cooling.

THERMOSTAT

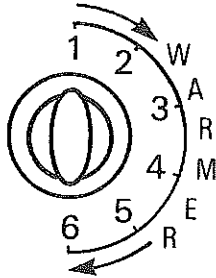

3. Set Thermostat Comfort Control on Models JH400 and JH600 to the setting which best suits your comfort requirements. The higher the number (1 through 6), the warmer the room temperature before heat turns off.

4. To replace snap-on air filter on Models JH200 (optional) and JH400, simply remove filter assembly and pop open filter housing, and discard old filter. The filter has an air purifying charcoal medium which is largely eliminated by washing or vacuuming. Always replace filters periodically with fresh filters available from your Intermatic Heatwave dealer or an Intermatic Service Station. See back page for locations.

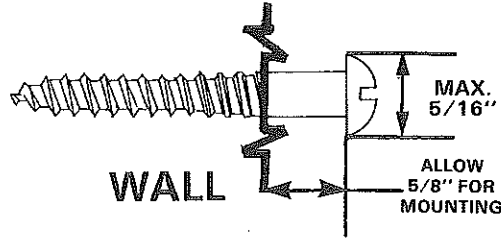

5. Model JH200 and Model JH400 may be mounted on a wall. Notches are provided on the rear housing surface for easy installation (see this page for template screw locations). Use care in selecting location for mounting your heater to avoid knocking off wall. Do not mount in areas near water such as over sinks, bath tubs, or shower areas. (Revisit part #4 under important instructions to make certain unit is not mounted where it could contact water if it fell.

SPECIFICATIONS	MODEL JH200	MODEL JH400	MODEL JH600
RATINGS	750/1500 Watts 120 Volts, 60 Hz. 2560/5120 BTU	750/1500 Watts 120 Volts, 60 Hz. 2560/5120 BTU	750/1500 Watts 120 Volts, 60 Hz. 2560/5120 BTU
AIR FLOW	115 CU.FT./MIN. 100 CU. FT./MIN. WITH OPTIONAL FILTER	115 CU.FT./MIN. 100 CU. FT./MIN. WITH OPTIONAL FILTER	75 CU. FT./MIN.
COMFORT CONTROL THERMOSTAT	NO	YES	YES
COMFORT SELECTOR	ROTARY DIAL	ROTARY DIAL	PUSH BUTTON
SAFETY FEATURES	SHOCK AND FIRE RESISTANT PLASTIC HOUSING SAFETY LIMIT SHUT-OFF-SWITCH	SHOCK AND FIRE RESISTANT PLASTIC HOUSING SAFETY LIMIT SHUT-OFF-SWITCH	SHOCK AND FIRE RESISTANT PLASTIC HOUSING SAFETY LIMIT SHUT-OFF-SWITCH
CASE COLOR	GREY/BLACK	ALMOND/BLACK	ALMOND
FILTER	OPTIONAL	YES	NO

CARE AND STORAGE OF YOUR HEATER

1. When storing Intermatic Heatwave, carefully wrap heater cord around storage brackets. On models JH200 and JH400 only. On JH600 carefully fold cord or wrap around heater for storage. Store heater in original carton when not in use.
2. To clean plastic housing, turn unit to OFF then unplug. Wipe with clean dry cloth. Do not use furniture polish or solvents. Keep away from all oils.
3. Periodically clean any accumulated dust from air flow openings.
4. Do not attempt to oil motor. Motor is equipped with permanently lubricated bearings. Do not attempt to repair your heater should it become damaged. Return to your authorized service station for repair or replacement.

GUARANTEE

Intermatic guarantees that Intermatic HEATWAVE shall be free of defects in workmanship and materials for one year from the date of purchase.

This guarantee does not apply to: (a) damage caused by accident, abuse, mishandling, or dropping (b) units which have been subject to unauthorized repair, opened, or taken apart; or (c) units not used in accordance with instructions.

If Intermatic HEATWAVE fails to operate properly under normal use within the guarantee period because of a defect in workmanship or material, Intermatic will repair or replace unit. Simply, either return heater to dealer from whom it was purchased or mail, postage prepaid, to the service station listed below. Please enclose a letter indicating the reason for returning the unit. Allow at least four to five weeks for servicing and mailing time.

Do not attempt to repair Intermatic HEATWAVE yourself.

This guarantee gives you specific legal rights, and you may also have other rights which vary from state to state.

IMPORTANT: Be sure to package your unit securely before mailing. Intermatic is not responsible for damage occurring as a result of postal handling.

HEATER ACCESSORIES FOR MODELS JH200 & JH400

- JH101 Contains 3 replacement filter elements.
JH102 Contains filter housing and 3 filter elements.

REGIONAL SERVICE CENTERS

INTERNATIONAL TIMERS SERVICE CO., INC.
110 Roosevelt Avenue
Mineola, L.I. N.Y. 11501
(516) 294-2934

INTERMATIC SERVICE CENTER
225 North West Street
Hillsboro, Ohio 45133
(513) 393-4740

INTERNATIONAL TIMERS OF FLORIDA
1122 S.E. 12th Place
Cape Coral, Florida 33904
(813) 574-6743

RUSS INTERNATIONAL, INC.
12918 South Spring Street
Los Angeles, California 90061
(213) 321-9154
(213) 321-7121

INTERMATIC INCORPORATED
4700 West Montrose Avenue
Chicago, Illinois 60641
(312) 282-7310

INTERMATIC INCORPORATED
SPRING GROVE, ILLINOIS 60081-9698