




INTERMATIC TIME-ALL[®]
MULTIPLE ON/OFF SETTINGS
PROGRAM REPEATS EVERY 24 HOURS
TO SET TIMER: (SEE ILLUSTRATION)

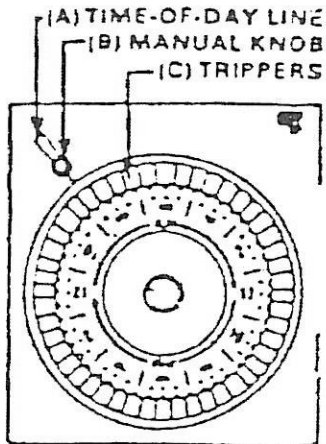

1. PULL UP one tripper (C) for each half hour of ON TIME, between desired hour marks. on the 24 hr. dial. For example, if you want the timer ON from 6-10 pm, all 9 trippers between 6-10 pm must be pulled up.
2. Turn dial **CLOCKWISE**  one or more complete revolutions until the correct time-of-day is adjacent to the time-of-day line (A).
3. Turn lamp or appliance ON and plug into timer.
4. Plug timer into electrical outlet.

FOR EARLY ON OR OFF OPERATION,

Turn manual knob (B) counter clockwise  to desired ON or OFF position. Timer will follow next scheduled automatic operation.

IN CASE OF POWER FAILURE, RESET TIMER, (SEE STEP 2)

CAUTION: WATTAGE OF LAMPS OR APPLIANCES BEING CONTROLLED SHOULD NOT EXCEED CAPACITY OF TIMER.

MODEL: SB811

15 AMP.-1875 WATT "R"; 1250 WATT "T"
 "TV-5"; 1/3 HP.-125 VOLT 60 HZ

INTERMATIC INCORPORATED
 SPRING GROVE ILLINOIS 60081-9698
 1645877L3



LISTED
 E88L